

**Head Office:**

Durban  
93 Goodwood Road  
Mahogany Ridge  
Durban  
South Africa

☎ +27 31 464 0273

**Johannesburg**

Unit 6, Hambleton Park  
98 Richards Drive  
Halfway House  
Midrand, Johannesburg  
South Africa

☎ +27 11 021 4177

**Cape Town**

Unit B19, Icon Park  
Fourie Street  
Brackenfell  
Cape Town  
South Africa

☎ +27 21 801 4258



<b>DESCRIPTION:</b>	Soft Soap Pipe Jointing Lubricant
<b>PACK SIZES:</b>	500g Tub - 12 Per Box 1kg Bucket - 8 Per Box 2kg Bucket - 6 Per Box 5kg Bucket - 2 Per Box
<b>STOCK CODES:</b>	500g Tub - 50-SOFTSOAP2062 1kg Bucket - 50-SOFTSOAP2063 2kg Bucket - 50-SOFTSOAP5734 5kg Bucket - 50-SOFTSOAP5735

**GLUEDEVIL** SOFT SOAP is a non-corrosive gel-like soap that can be used as a lubricant for pipe jointing as well as for tyre fittings or to assist in the process of removing tyres from the rims. With its degreasing qualities, it will dissolve away organic matter from floors, tiles, concrete, metal, painted or varnished surfaces.

**DIRECTIONS FOR USE AS A PIPE LUBRICANT:**

- Clean the spigot end of the pipe checking to see that the surface is smooth and free from indentations or deep scratches.
- Apply lubricant evenly around the spigot end to approximately half the pipe end and mark which indicates the depth of entry.
- Lubricate the ring lightly as well.

**DIRECTIONS FOR USE AS A TYRE LUBRICANT:**

- Apply lubricant with a brush or cloth between the edge of the tyre rim and the tyre bead prior to the removal of the tyre from the rim.
- Apply lubricant to the new tyre for ease of fitting onto the rim.
- Wipe away any excess lubricant on the tyre or rim with a clean cloth.

Your regional representative is eagerly awaiting YOUR call...

# SOFT SOAP